

DISPENSA Pantry VVS-X




KESSEBÖHMER

14

Installing the shelves




mm

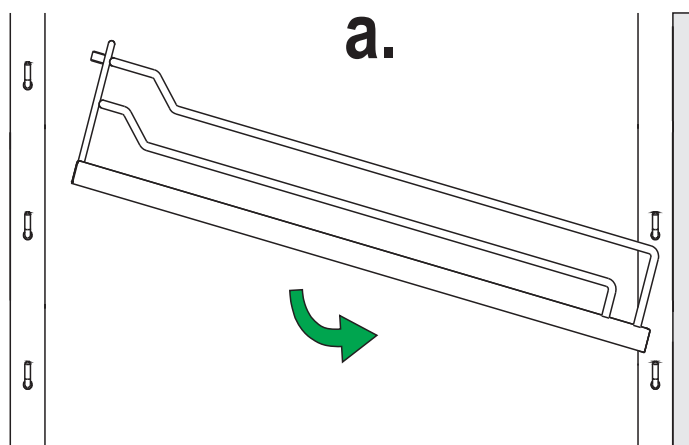

Door

Install shelves resting the front edge first, then engage the back hooks.

Don't push on side rails to install !

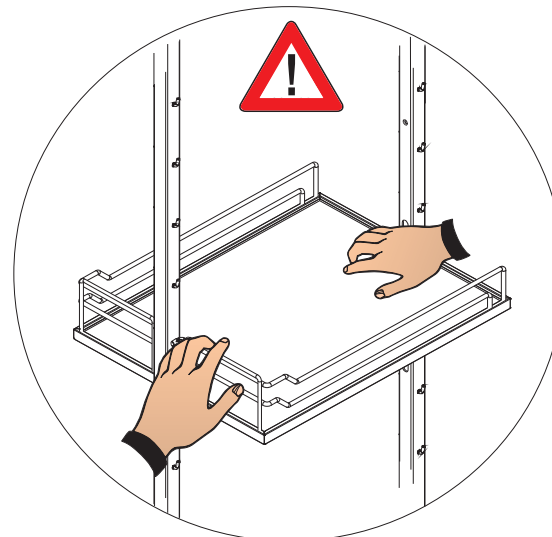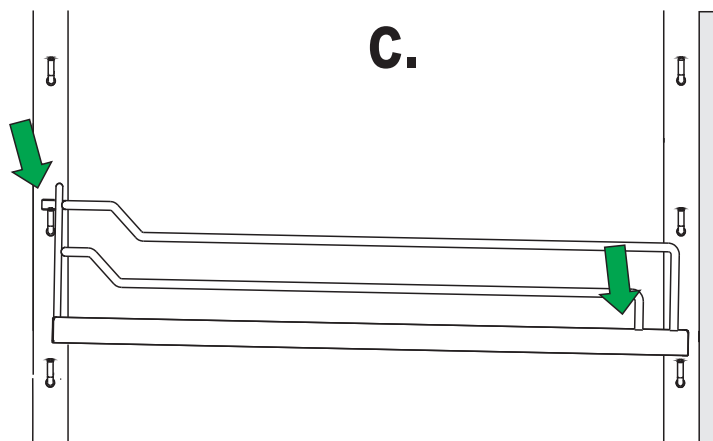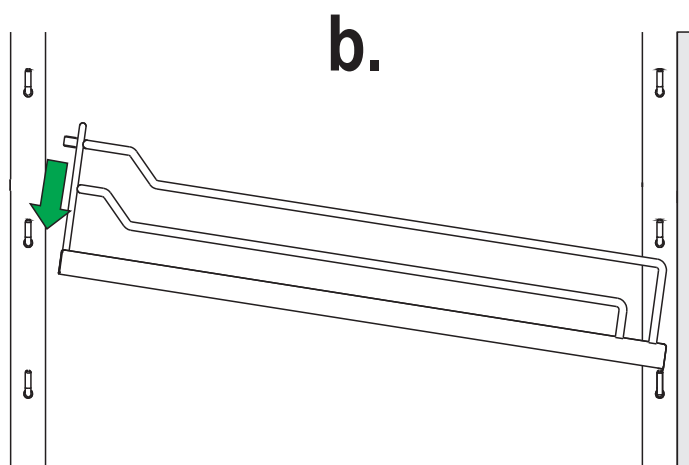

Subject to technical modifications without notice.