


Wide Door Bracket for Waste Bin Pull-Out



KESSEBÖHMER



Start with the installation of the WPO
according to the instruction MA 402104
MA 402105

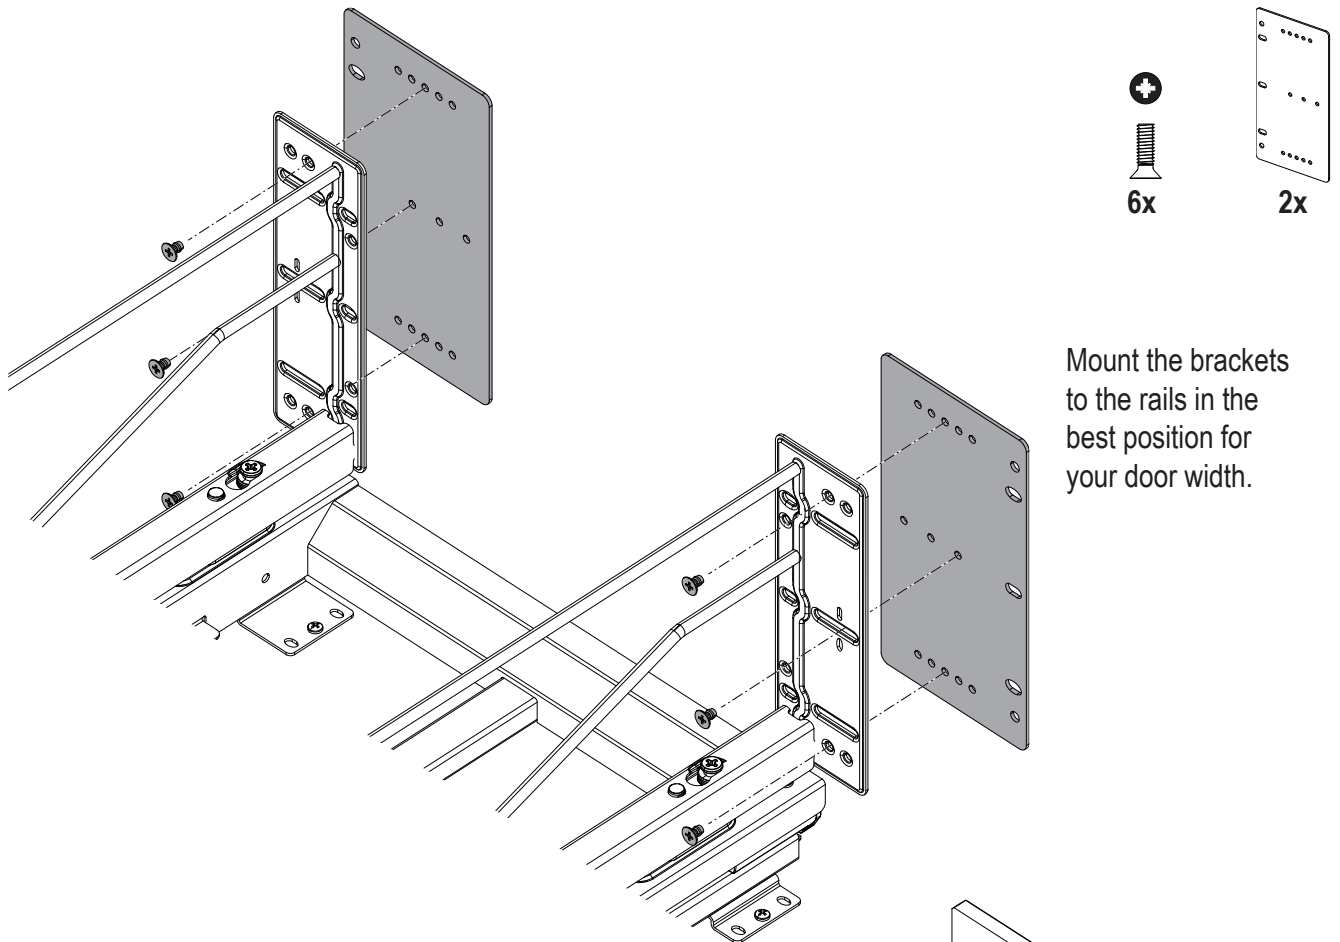

Mount the brackets
to the rails in the
best position for
your door width.

Follow the main
instructions on
page 6

